

NGL0001&NGL0002喷漆枪爆炸图零件清单

爆炸图序号	英文名称	中文名称	用量	单位	
2	Needle packing spring	针塞调节弹簧	1	pcs	
8	Nozzle seat	喷嘴座	1	pcs	
9	Nozzle	喷嘴	1	pcs	
10	Air cap	流帽	1	pcs	
11	Washer for air cap	定位圈垫圈	1	pcs	
12	Locking ring	定位圈	1	pcs	
13	Retainer	保护圈	1	pcs	
38	Needle	喷针	1	pcs	
39	Needle adjust spring	针塞调节弹簧	1	pcs	
40	Spring plug	弹簧栓	1	pcs	
41	Needle adjust knob	针塞调节旋钮	1	pcs	
43	Strainer	过滤器	1	pcs	
44	Gland seal	轴封	1	pcs	
45	Cup connector	杯连接器	1	pcs	
46	Cup	料罐	1	pcs	
47	Decoration ring	装饰环	1	pcs	
48	Cup lid	杯盖	1	pcs	
49	Cup cap	杯帽	1	pcs	
52	Brush A	清洗刷 A	1	pcs	

